GLUE TO PLYWOOD USING SPRAY ADHESIVE

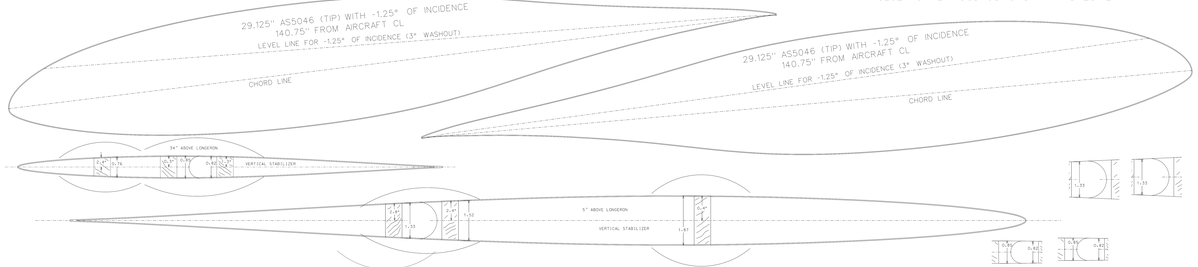

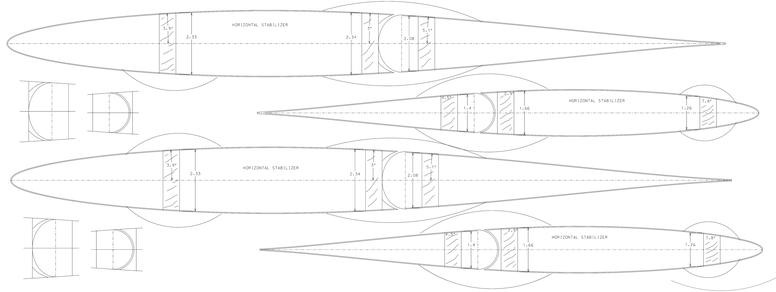

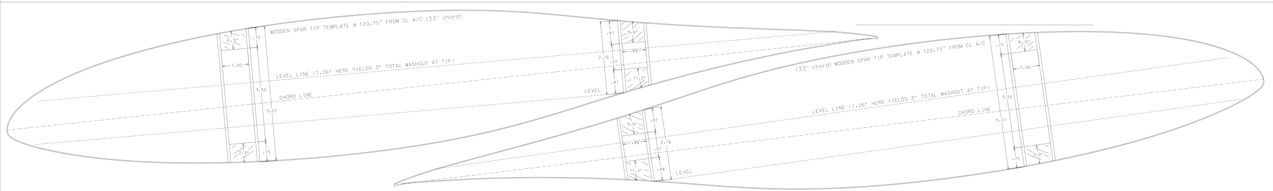

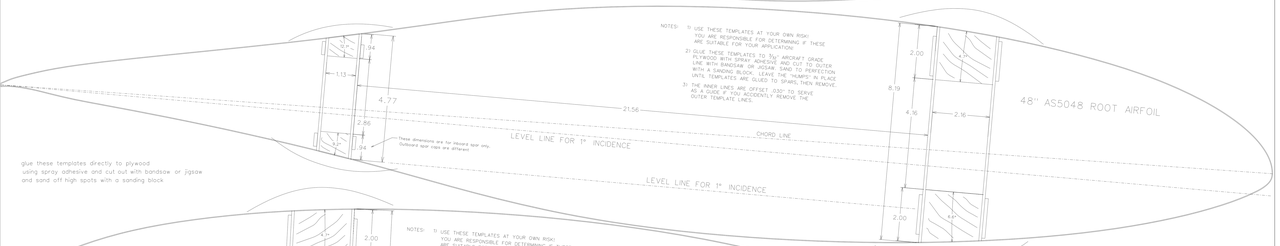

NOTES:
1) USE THESE TEMPLATES AT YOUR OWN RISK! YOU ARE RESPONSIBLE FOR DETERMINING IF THESE ARE SUITABLE FOR YOUR APPLICATION.
2) GLUE THESE TEMPLATES TO ¾" AIRCRAFT GRADE PLYWOOD WITH SPRAY ADHESIVE AND CUT TO OUTER LINE WITH BANDSAW OR JIGSAW. SAND TO PERFECTION WITH A SANDING BLOCK. LEAVE THE "HUMPS" IN PLACE UNTIL TEMPLATES ARE GLUED TO SPARS, THEN REMOVE.
3) THE INNER LINES ARE OFFSET .030" TO SERVE AS A GUIDE IF YOU ACCIDENTLY REMOVE THE OUTER TEMPLATE LINES.

glue these templates directly to plywood
using spray adhesive and cut out with bandsaw or jigsaw
and sand off high spots with a sanding block

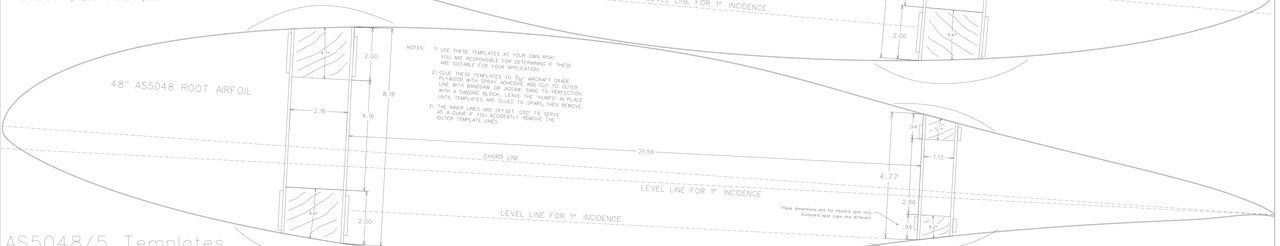

AS5048/5 Templates

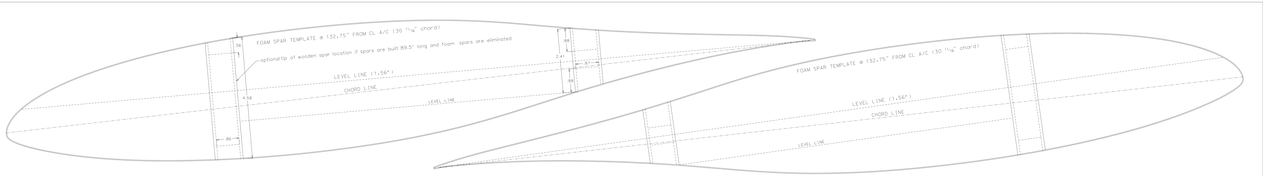

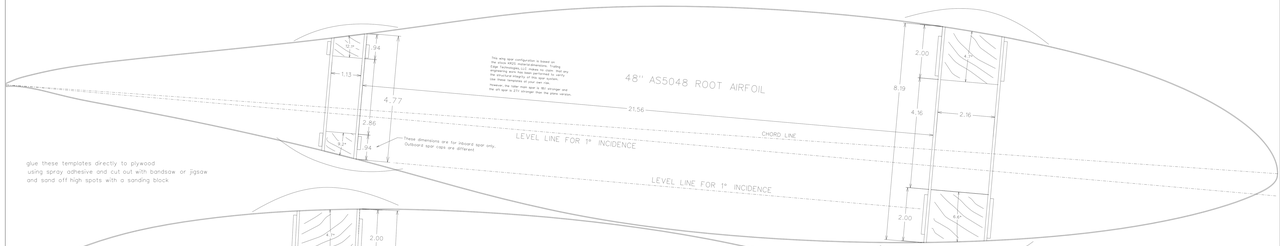

glue these templates directly to plywood
using spray adhesive and cut out with bandsaw or jigsaw
and sand off high spots with a sanding block

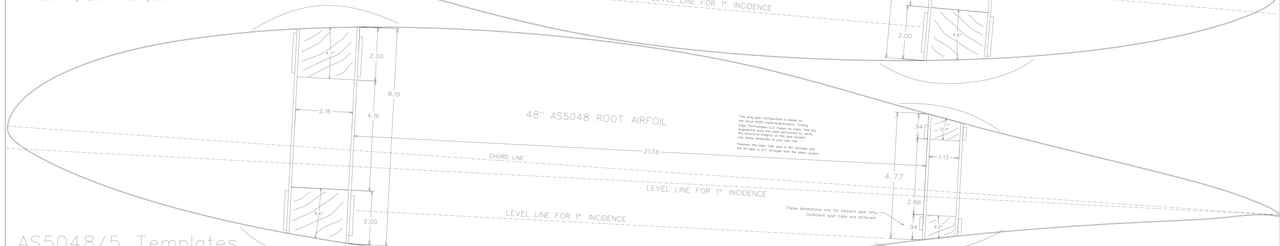

AS5048/5 Templates